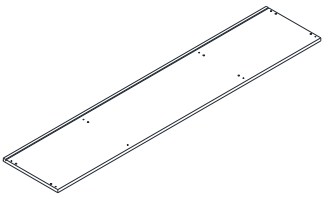 
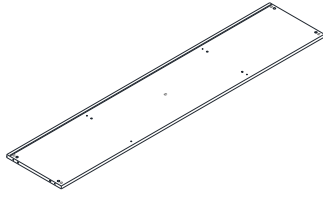 
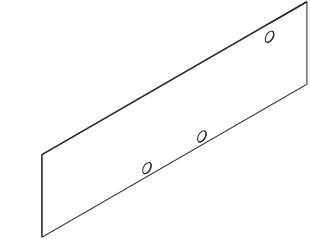 
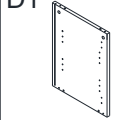 
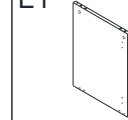 
 
 


 
 

 
 
 
 
 


 

 
 

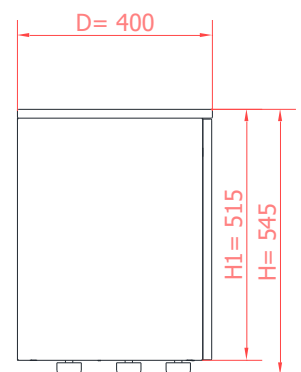 
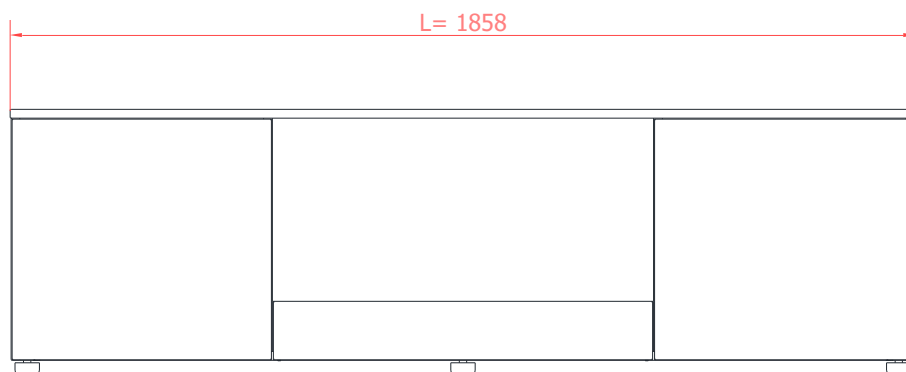 



TV Box

EN Installation manual / DE Montageanleitung / ES Manual de montaje / FR Notice de montage /
IT Istruzioni di montaggio / PL Instrukcja montażu /
RU инструкция по монтажу


A1  x1		B1  x1		C1  x1		D1  x1	E1  x1	
H1  x2	I1  x2	J1  x1	K1  x5	L1  x4	M1  x4	N1  x6	O1  3x20 x23	
P1  x2	R1  x16	S1  x8	T1  5x45 x4	U1  x16	W1  3,5x16 x8	Y1  3x20 x6	Z1  x1	
F1.1  x1	G1.1  x1	H1.1  x2						



 
1.

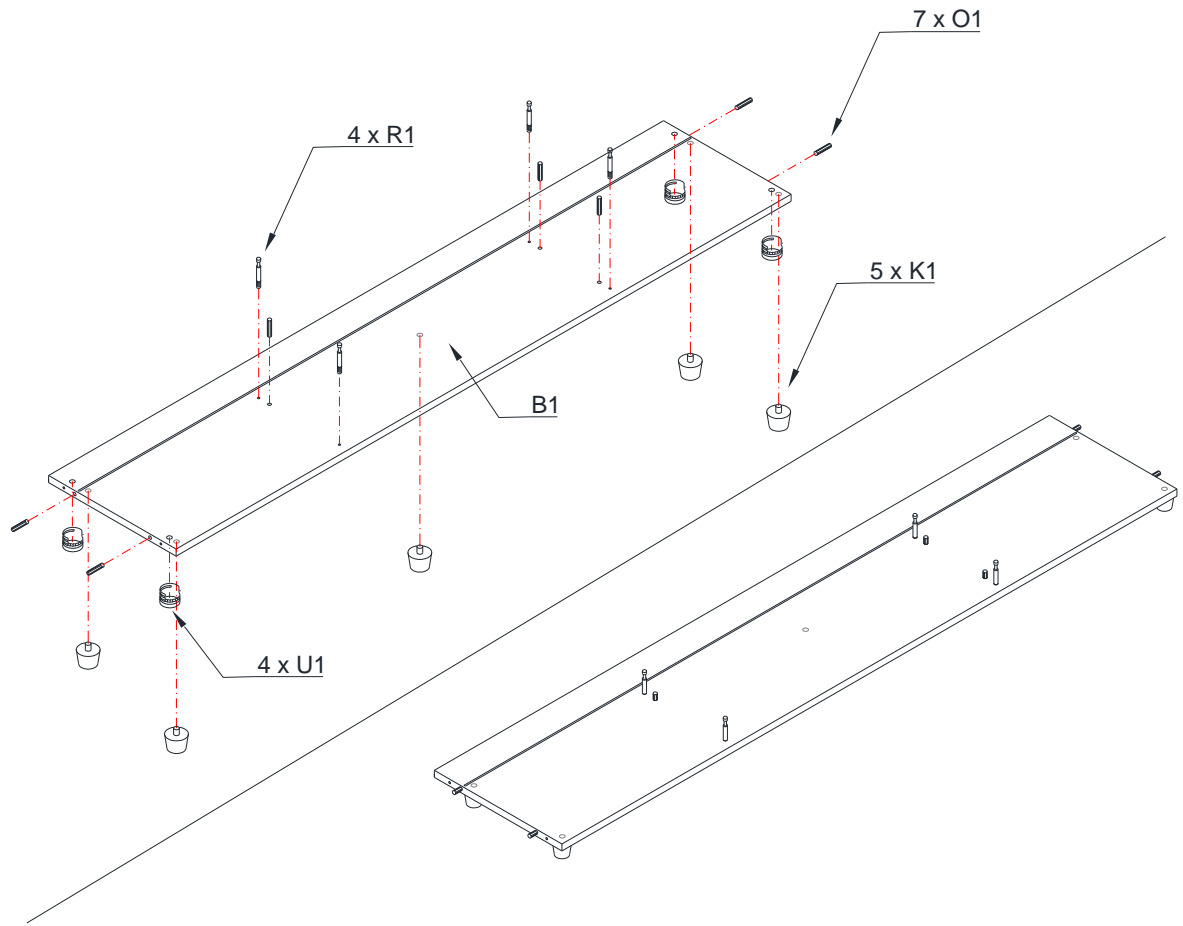

 
2.


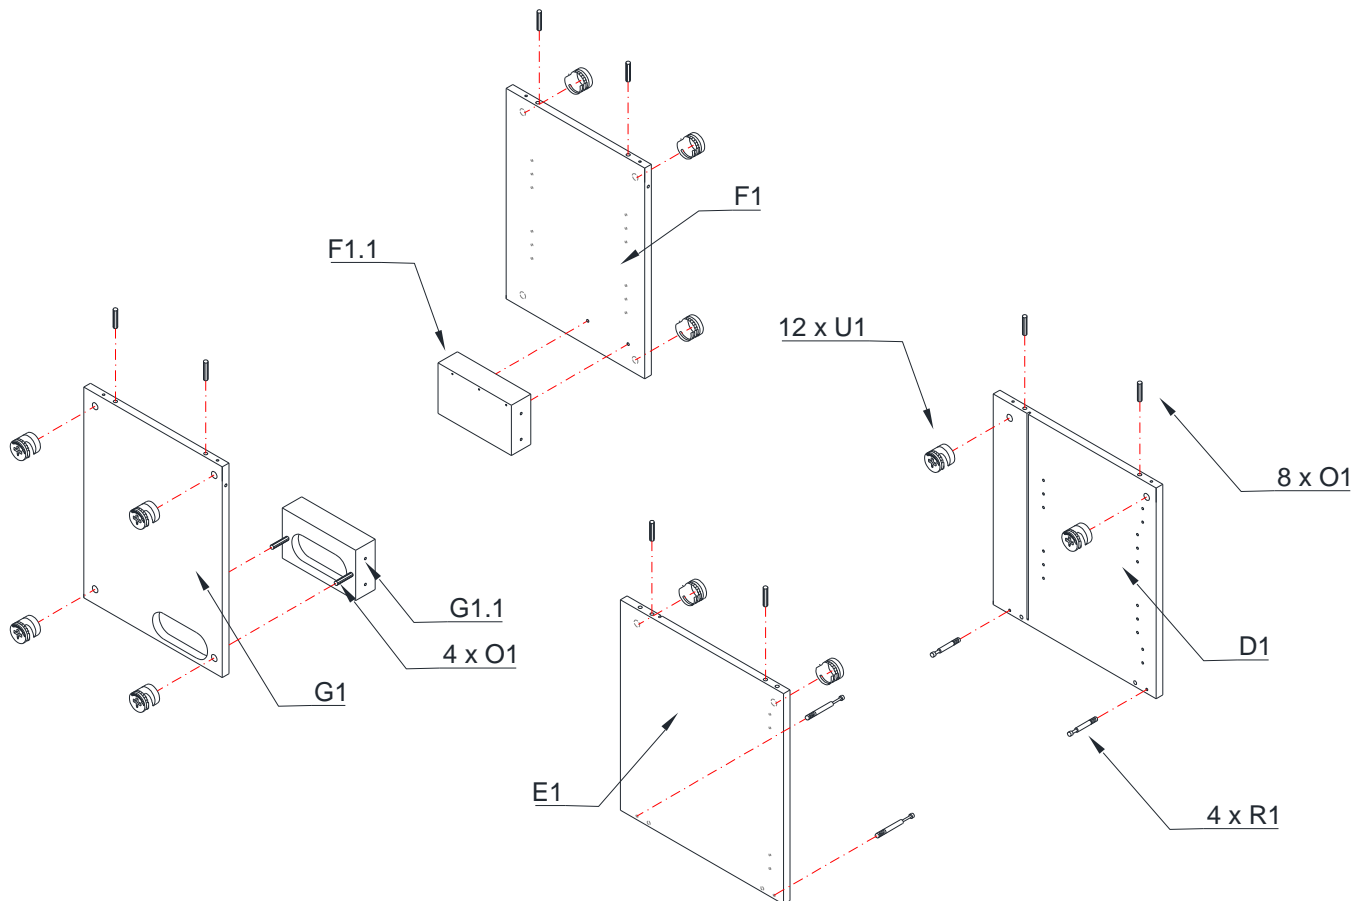


 3.

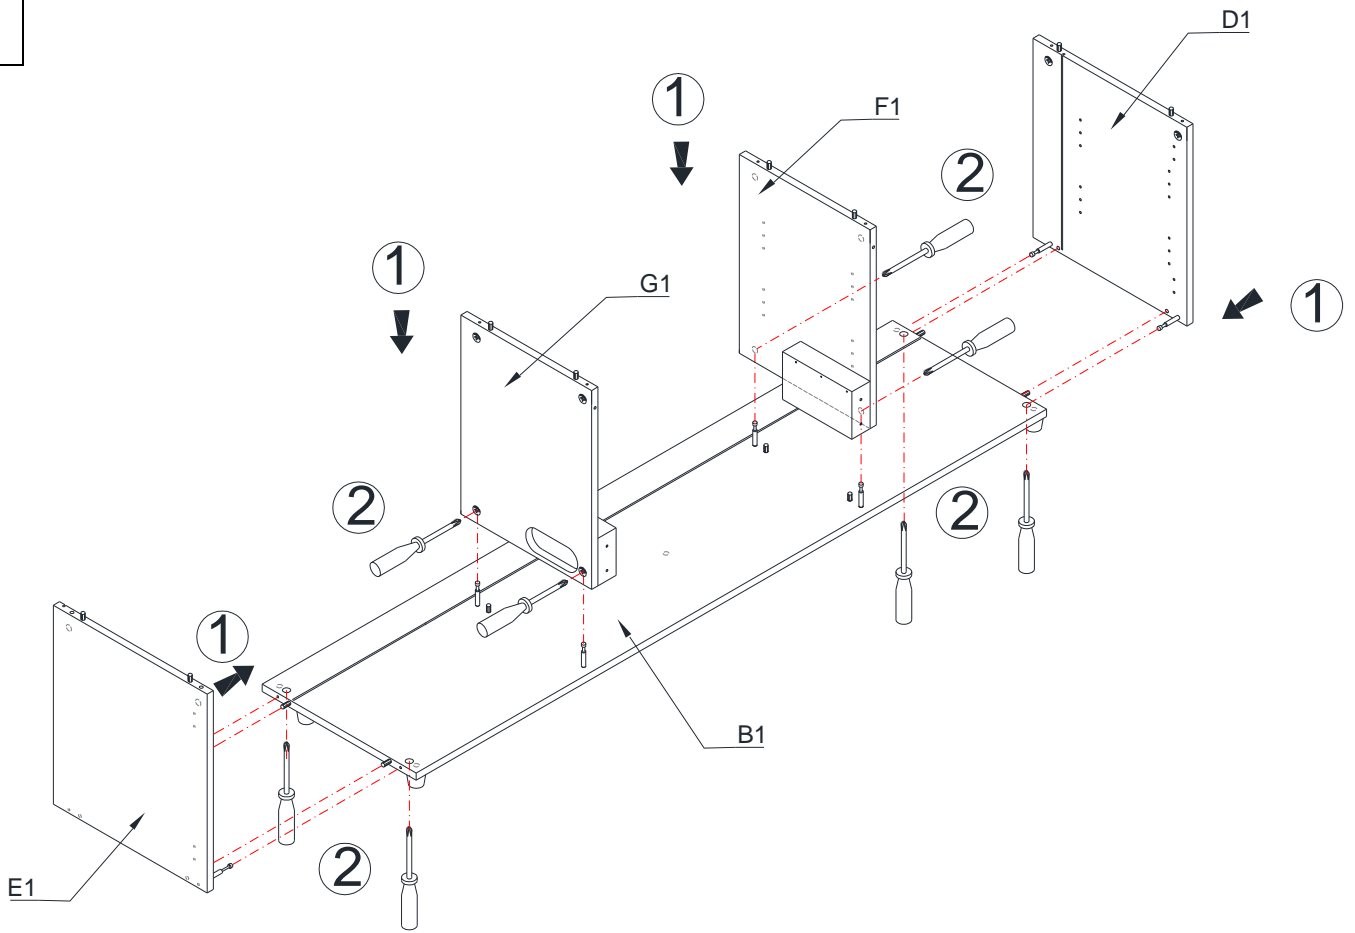


   4.

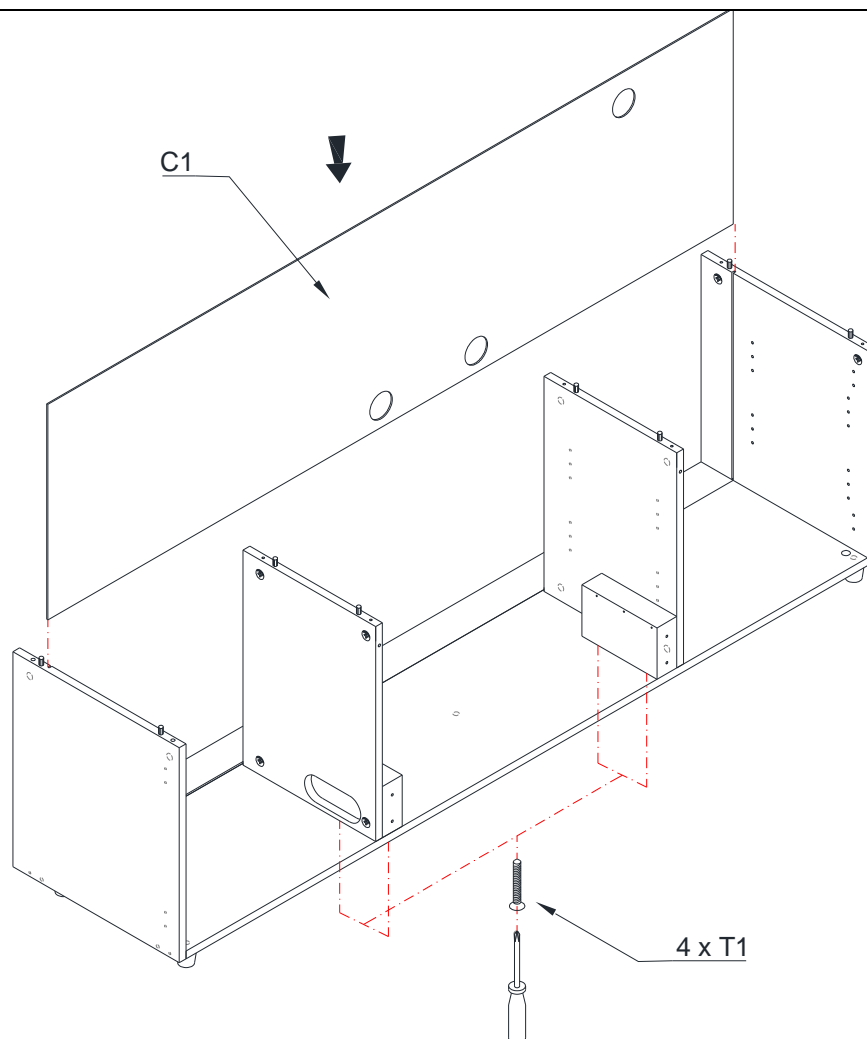


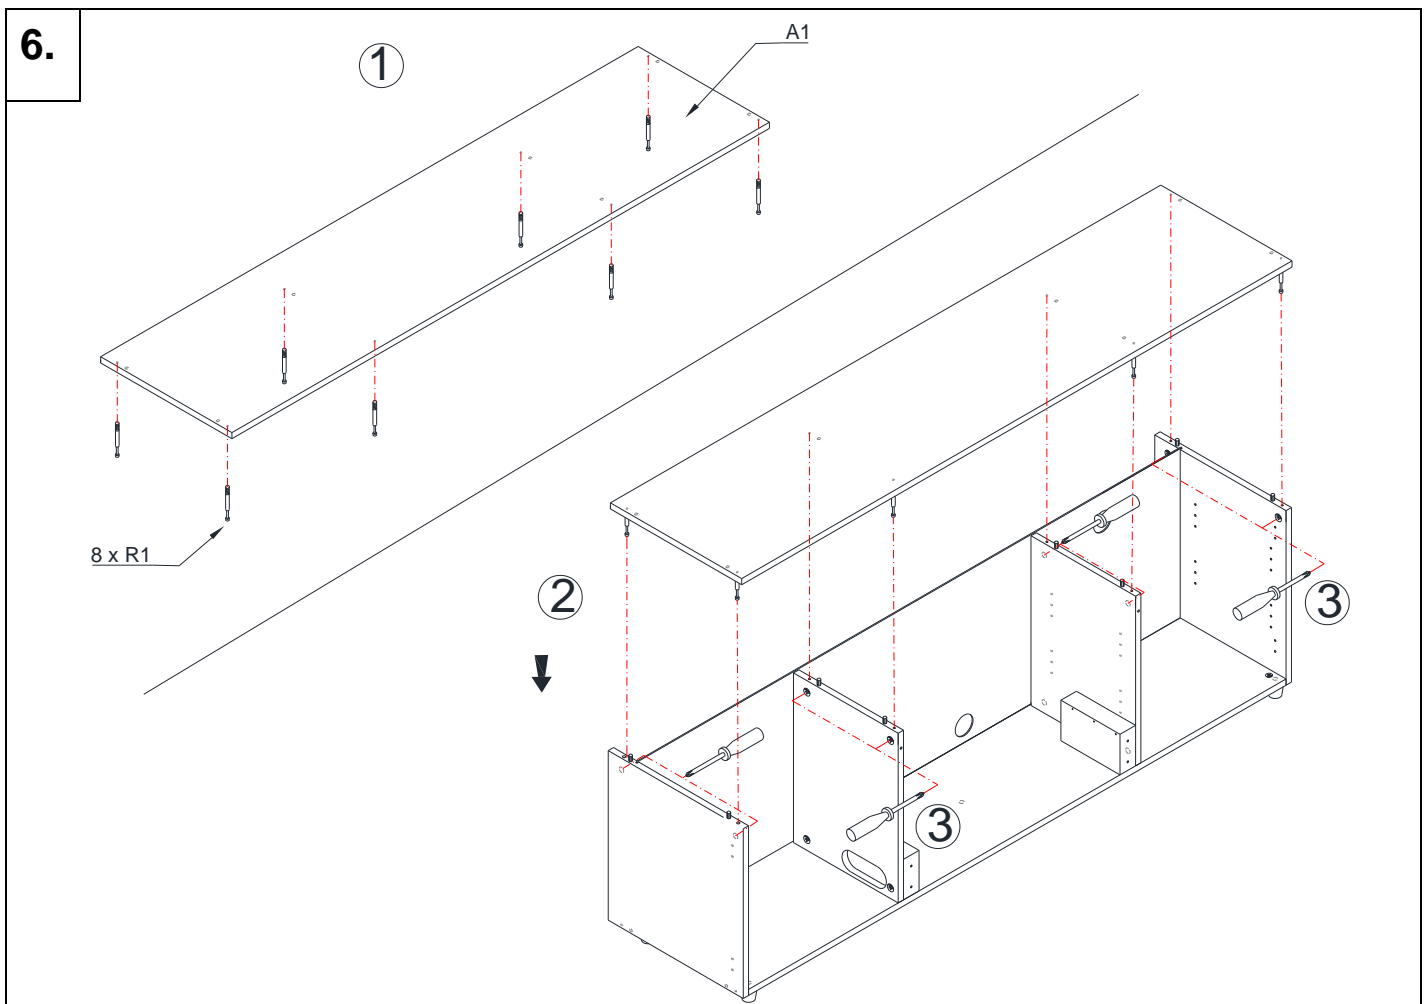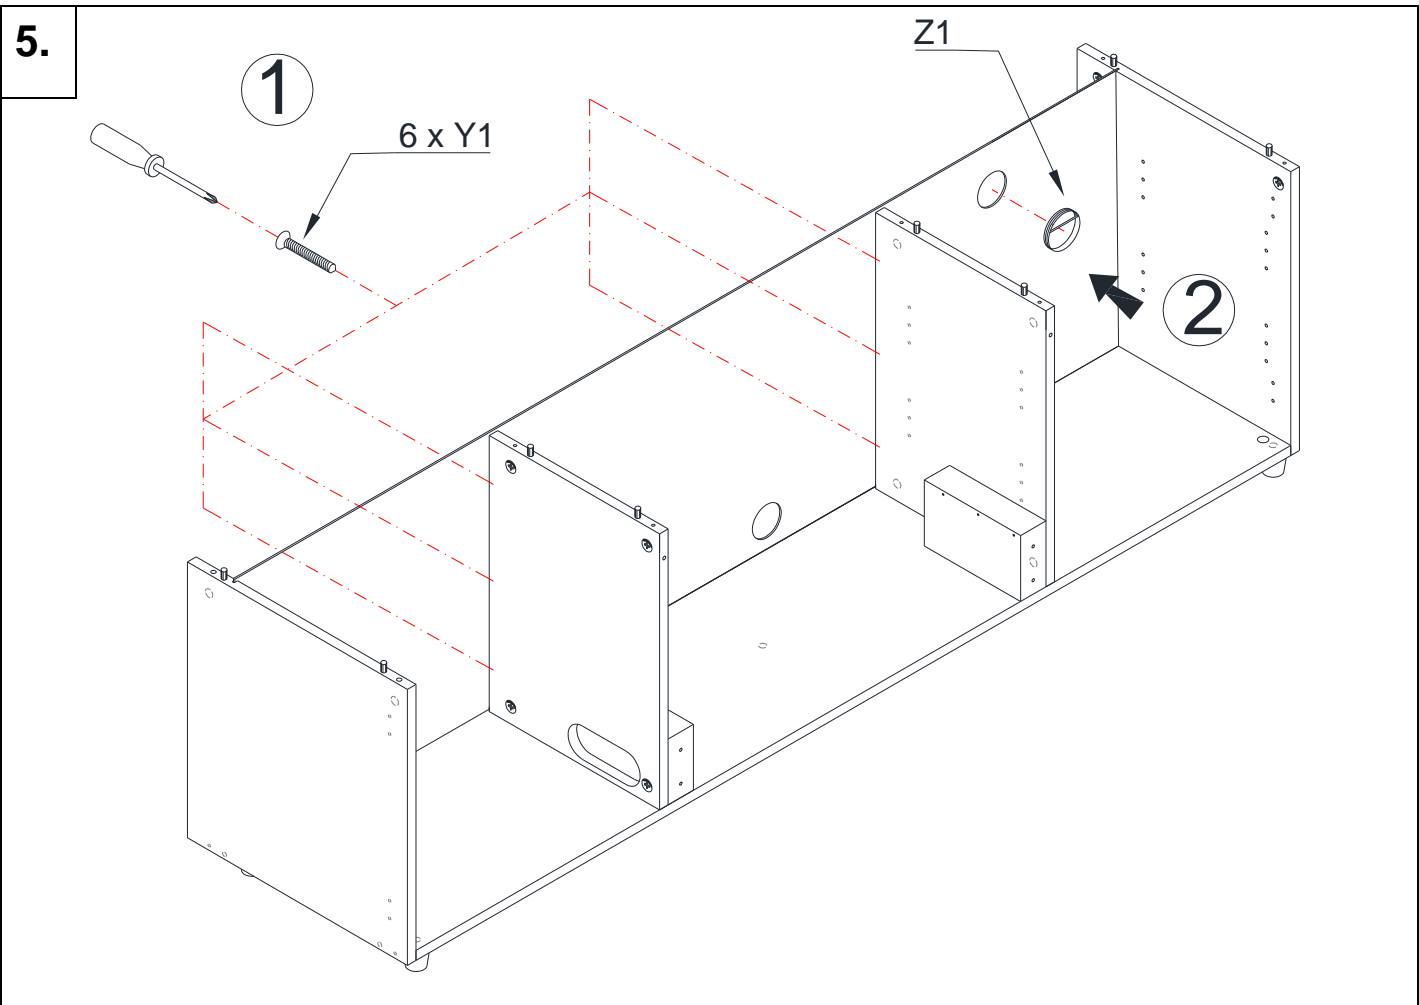

 
7.

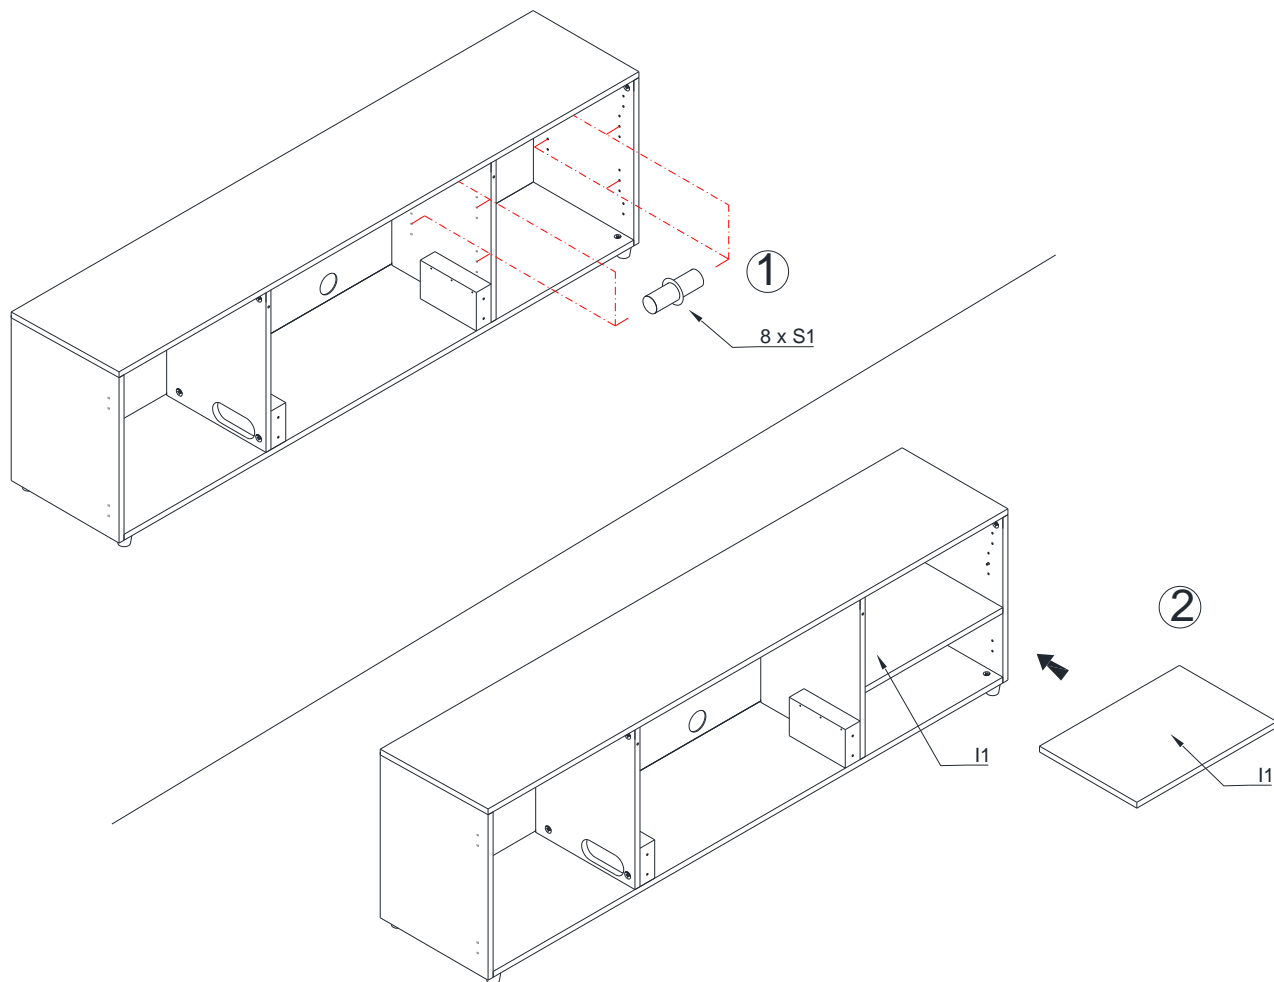

 
8.

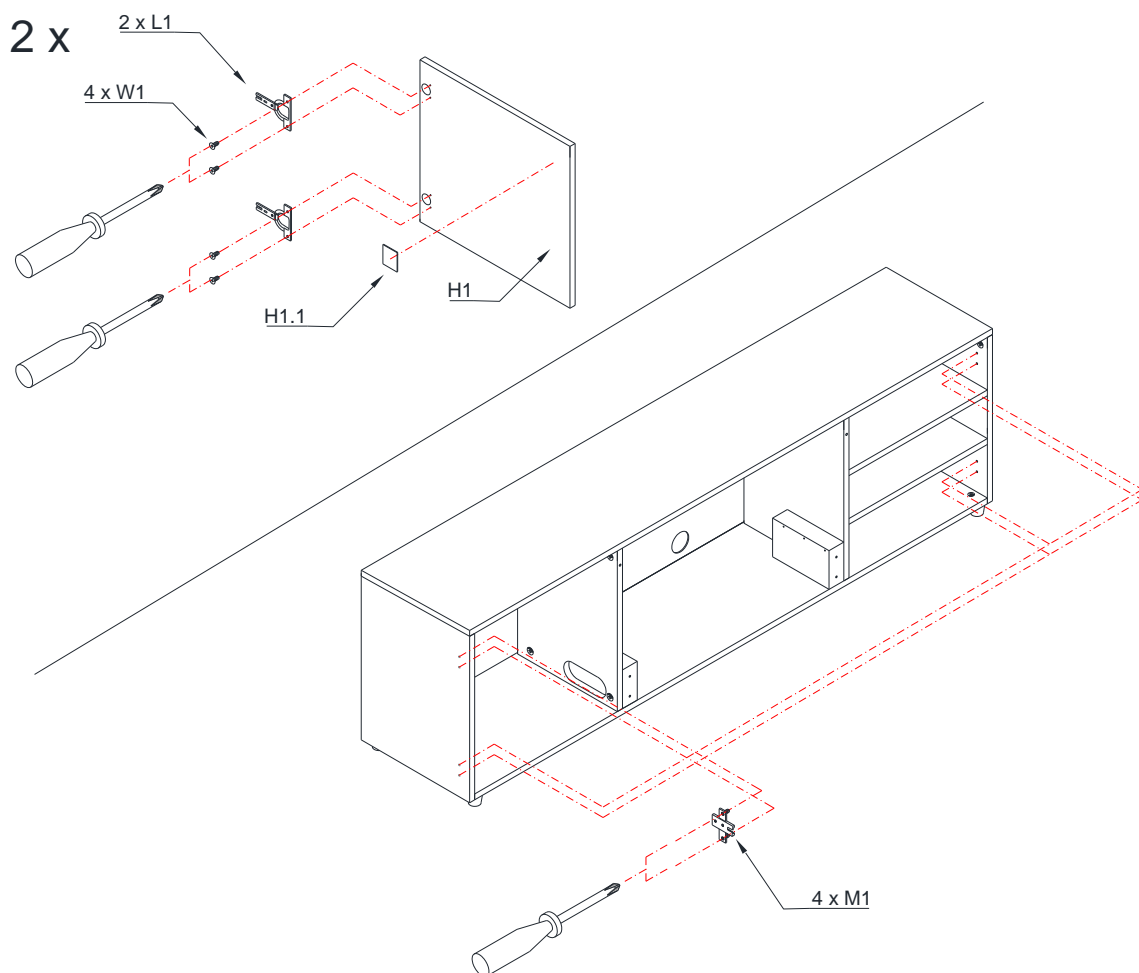

 
9.

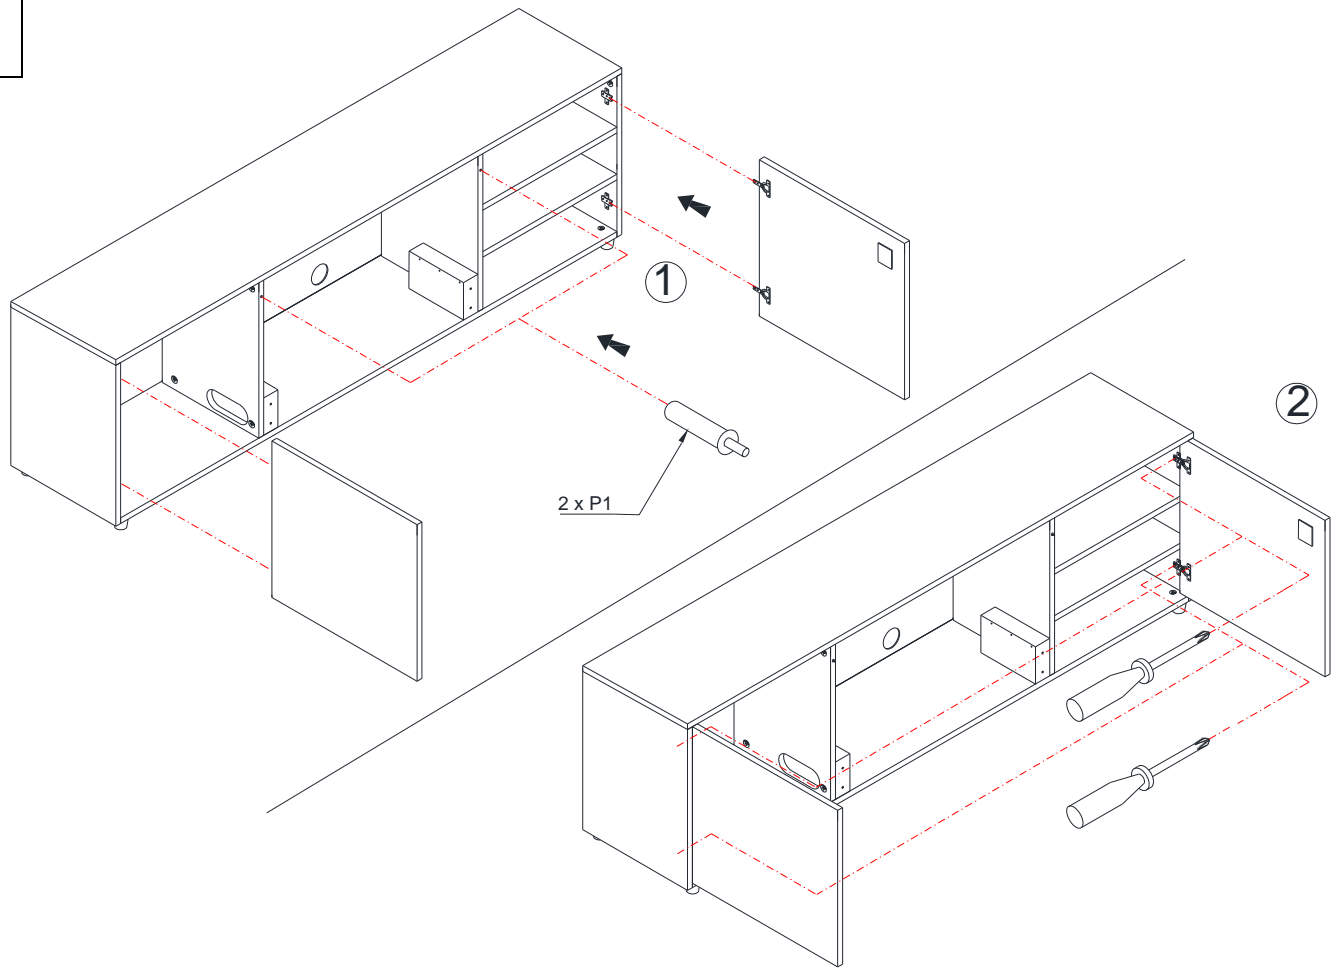

 
10.

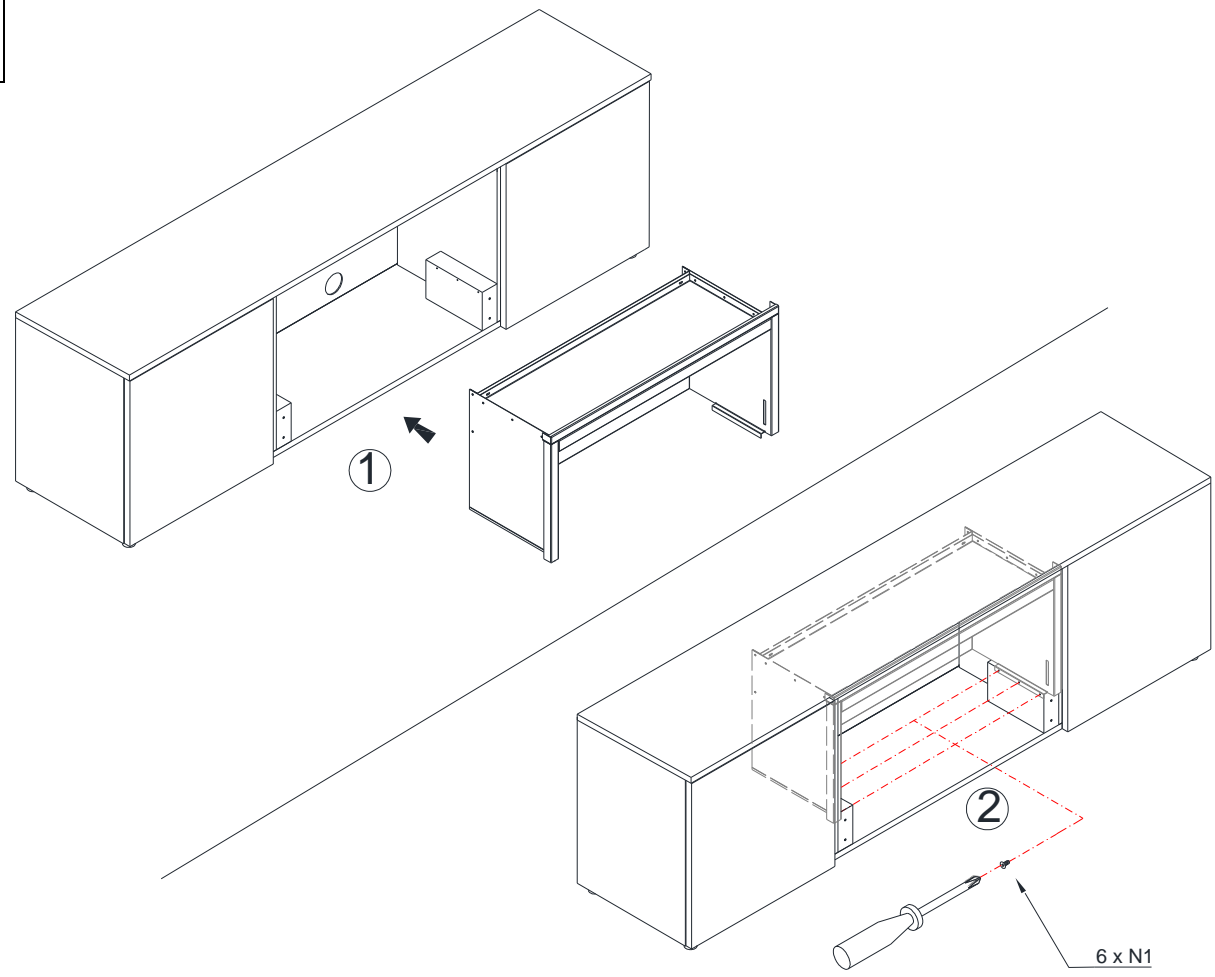

 
11.

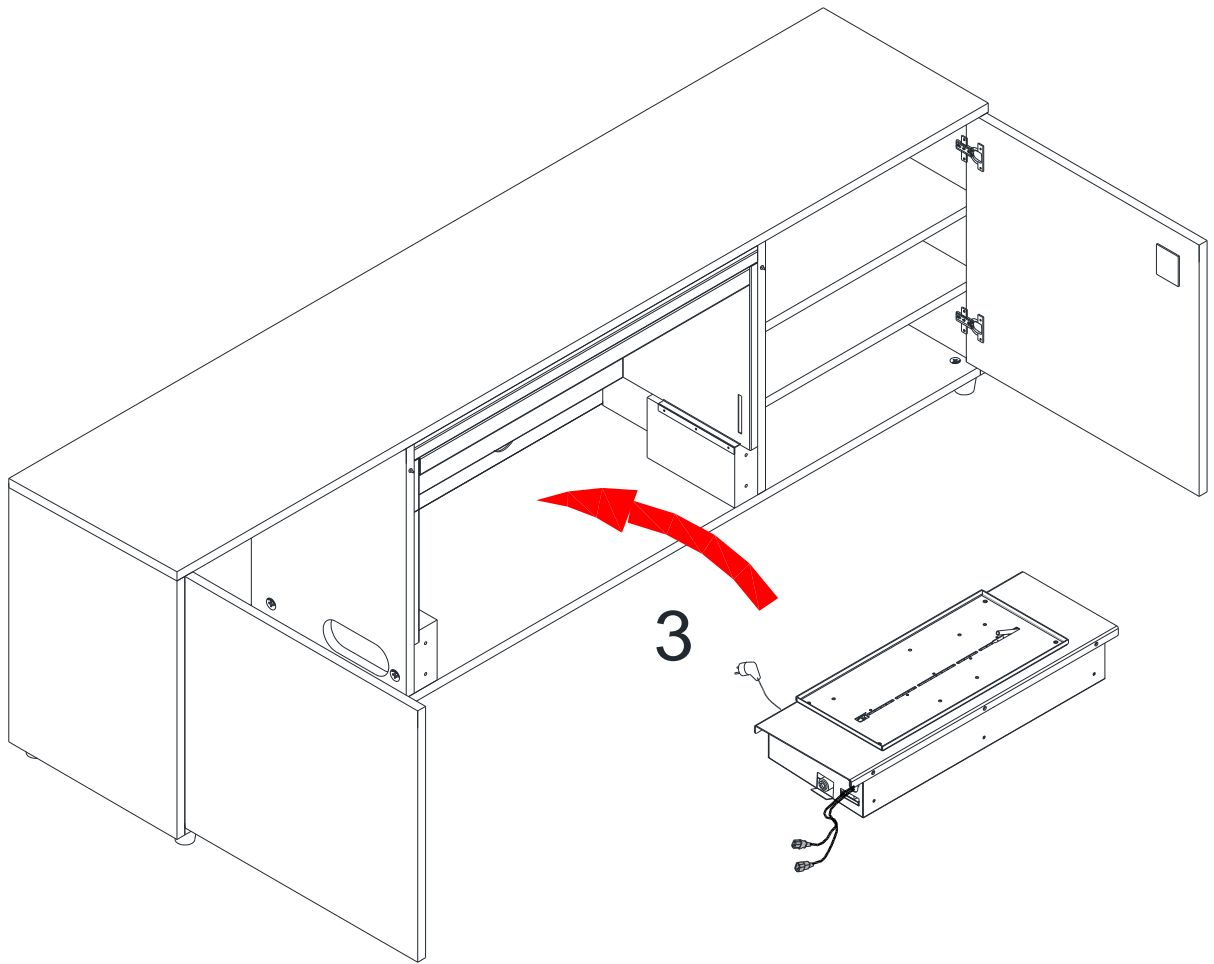

 12.

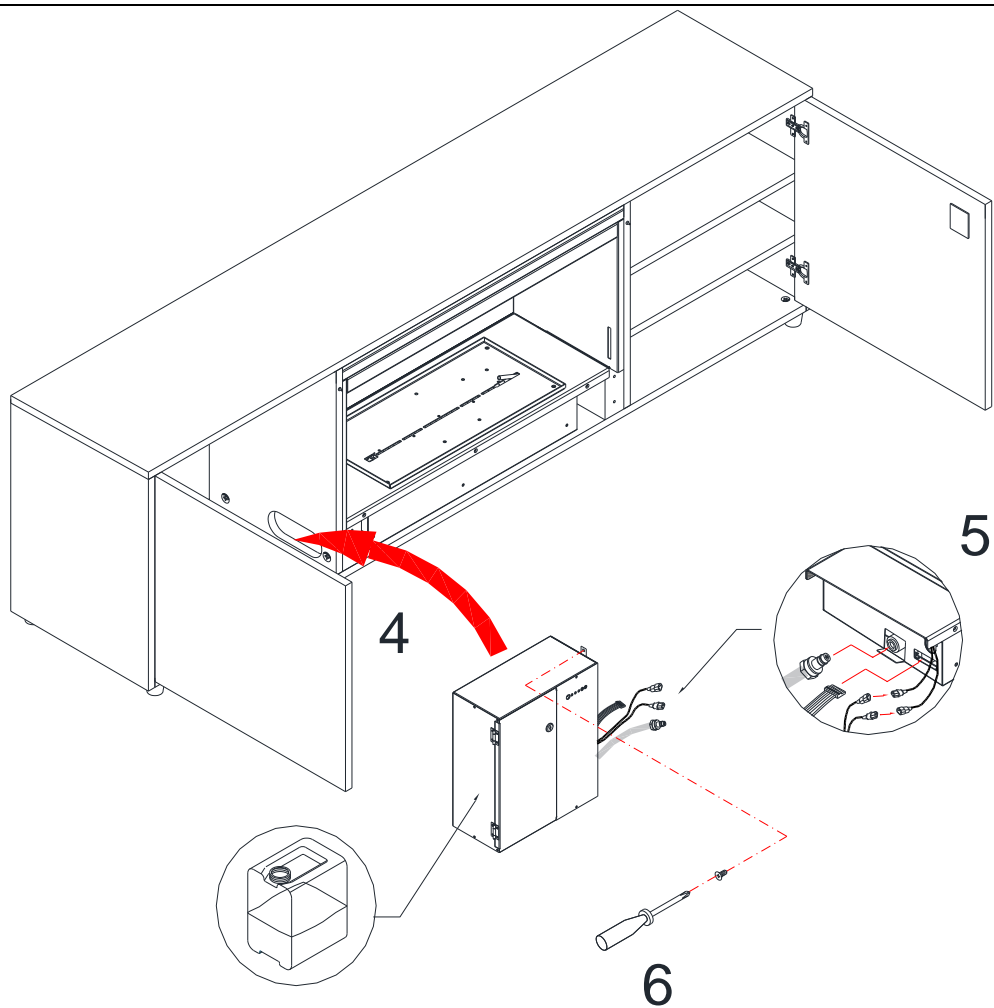

 13.

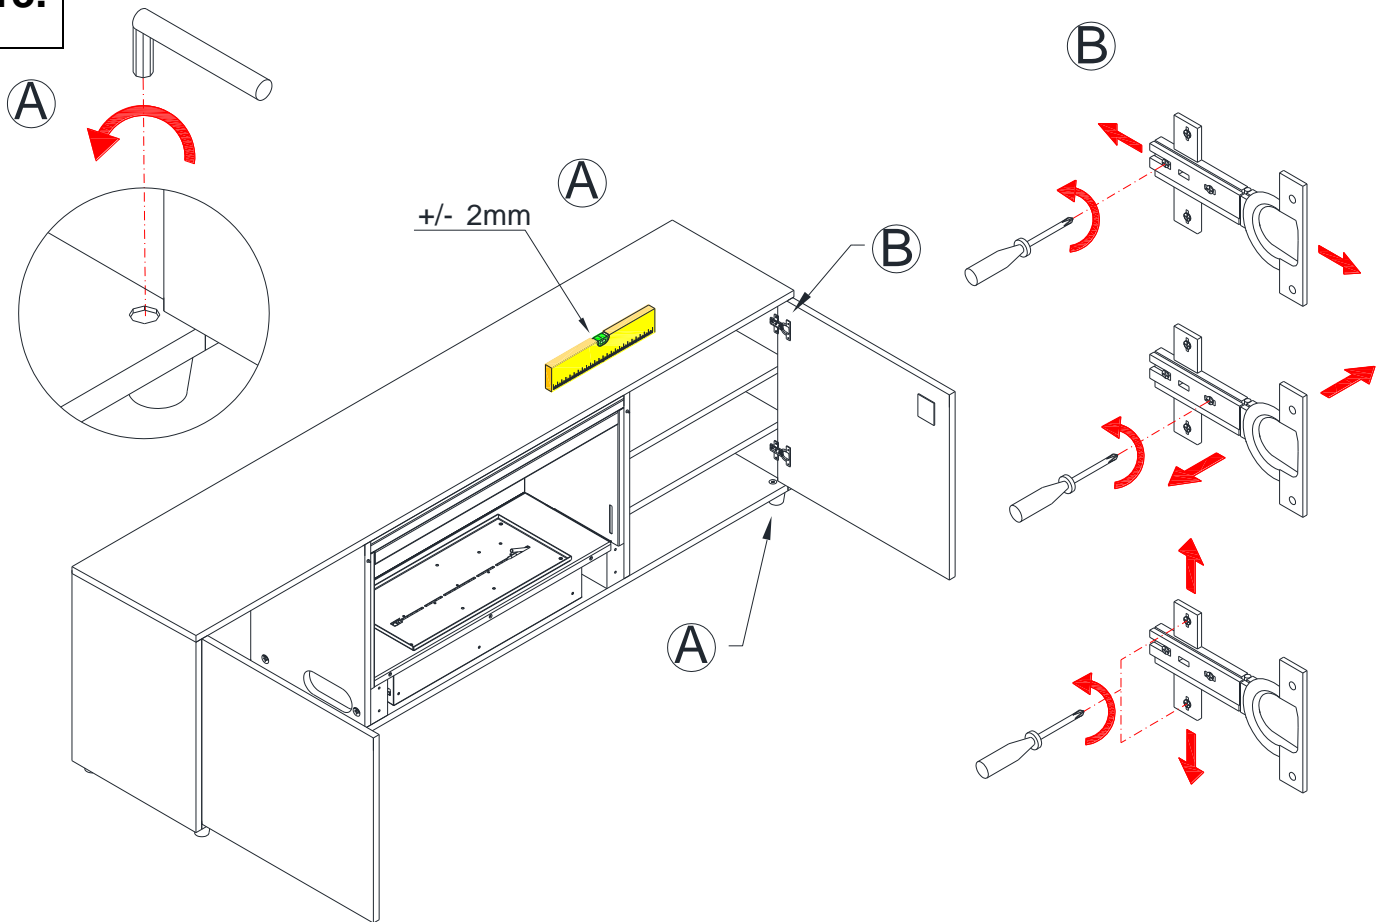

14.

